

**Operating Instructions
for
Variable area flow meter
with needle valve**

Model: UVR/UTR



1. Contents

1. Contents.....	2
2. Note	3
3. Instrument Inspection.....	3
4. Regulation Use	3
5. Operating Principle.....	4
6. Mechanical Connection.....	4
7. Electrical Connection	5
7.1 Inductive switch (option)	5
8. Operation	5
9. Maintenance	6
10. Technical Information.....	7
11. Order Codes	8
12. Dimensions	9
13. EU Declaration of Conformance	10
14. EU Declaration of Conformance (contact).....	11

Manufactured by:

Kobold-Unirota Ltd.
4400 Nyíregyháza
Derkovits út 132-136.
Tel.: +36-42-342-215
Fax: +36-42-500-175
E-Mail: info.hu@kobold.com
Internet: www.unirot.hu

Sold by:

Kobold Messring GmbH
Nordring 22-24
D-65719 Hofheim
Tel.: +49(0)6192-2990
Fax: +49(0)6192-23398
E-Mail: info.de@kobold.com
Internet: www.kobold.com

2. Note

Please read these operating instructions before unpacking and putting the unit into operation. Follow the instructions precisely as described herein.

The instruction manuals on our website www.kobold.com are always for currently manufactured version of our products. Due to technical changes, the instruction manuals available online may not always correspond to the product version you have purchased. If you need an instruction manual that corresponds to the purchased product version, you can request it from us free of charge by email (info.de@kobold.com) in PDF format, specifying the relevant invoice number and serial number. If you wish, the operating instructions can also be sent to you by post in paper form against an applicable postage fee.

The devices are only to be used, maintained and serviced by persons familiar with these operating instructions and in accordance with local regulations applying to Health & Safety and prevention of accidents.

When used in machines, the measuring unit should be used only when the machines fulfil the EC-machine guidelines.

as per PED 2014/68/EU

In acc. with Article 4 Paragraph (3), "Sound Engineering Practice", of the PED 2014/68/EU no CE mark.

Table 8, Pipe, Group 1 dangerous fluids

3. Instrument Inspection

Instruments are inspected before shipping and sent out in perfect condition.

Should damage to a device be visible, we recommend a thorough inspection of the delivery packaging. In case of damage, please inform your parcel service / forwarding agent immediately, since they are responsible for damages during transit.

Scope of delivery:

The standard delivery includes:

- Variable area flow meter model: UVR/UTR

4. Regulation Use

Any use of the device, which exceeds the manufacturer's specification, may invalidate its warranty. Therefore, any resulting damage is not the responsibility of the manufacturer. The user assumes all risk for such usage.

5. Operating Principle

The Kobold UVR/UTR model flowmeter/monitor works on the basis of the suspended float principle. It is used for measuring the flow rates in closed pipe line systems.

The medium flows from below through a glass measuring cone that gets wider on top. Thus, the float is raised and indicates the respective flow rate on the scale provided on the measuring cone. To monitor flow rate limits, the UVR/UTR meters can be optionally furnished with "open collector" proximity switches. These structures are produced both furnished with needle valve and without needle valve.

By its special design, this model is particularly suitable for applications where only very small operating pressures are available. Another advantage is offered by the very large sight glass which optically allows direct flow observation.

6. Mechanical Connection

Before Installation:


- Remove all transportation safety locks and ensure that no packing material remains within the unit.
- Be sure that the maximum allowable operating pressure and temperature is not exceeded (see Technical data).
- Install the flow meter in the piping system, ensure the instrument is under no mechanical stress/tension (install support bracing if necessary).
- Protect the measuring tube from external damage.
- Avoid pressure peaks in the measuring tube, e.g. from sudden surges or stoppage of flow.
- If possible, immediately after making mechanical connections, check whether the connections are properly sealed with no evidence of leakage

7. Electrical Connection

7.1 Inductive switch (option)

- Disconnect the sensor from the power supply.
- Screw on a screw nut (enclosed) with the sensor.
- Screw on the sensor into the sensor holder which is in the side of the flowmeter.
- Loose the screw of the sensor holder at the rod.
- Slide the sensor holder up or down until the reference edge coincides with the desired switch point scale reading.
- Cockle the screw of the sensor holder at the rod.
- Cockle the screw nut of the sensor.
- Wire the sensor to the electricity according to the following diagram.

Wiring diagram

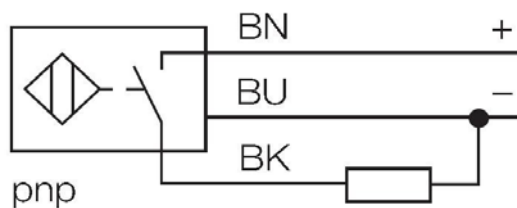

8. Operation

In order to initialise the inductive switch function, it is essential that the float activates the contact once in each direction.

Adjustment of limit-values

The switch-point can be adjusted to the desired levels by using.

Reference edge: approx. the middle of the sensor.

- Loose the screw of the sensor holder at the rod.
- Slide the switch housing up or down until the reference edge coincides with the desired switch-point scale reading.
- Cockle the screw of the sensor holder at the rod.

Overranging

With non-pulsating flow, the maximum flow rate can be exceeded. Only an increase in pressure loss will result (max. permissible operating pressure must not be exceeded!)

9. Maintenance

If the medium to be measured is clean, the series UVR/UTR is virtually maintenance-free. If deposits form on the inner housing or parts, periodic cleaning of the unit is recommended. Remove the units from the piping with a suitable tool; clean the flow meter with a suitable cleaning agent or make use of an ultrasonic bath.

10. Technical Information

Installation position:	vertical, flow from bottom
Accuracy class:	4 acc. to VDI
Max. temperature:	100°C (70°C with contact)
Max. pressure:	10 bar
Calibration conditions:	water: 20°C, air: 20°C, air pressure: 1.013 bar abs.
Ambient temperature:	0...+65°C
Protective category:	IP 65
Contact (optional):	proximity switch: PNP
open collector,	n/o contact
supply voltage:	12...24 VDC
current consumption:	10 mA max.
cable:	2 m, PVC-insulated

UVR/UTR

11. Order Codes

Order Details Liquids (Example: UVR-3 26H 0 I3 00)

Model	Measuring range Water (l/h)	Needle valve	Connection	Switch**	
UVR-0 UVR-3 UVR-5	20H = 10...100	0 = without 1 = with	I3 = G 3/8 N3 = 3/8" NPT YY = other	00 = none 1B = 1x N/O, PNP 2B = 2x N/O, PNP	
	22H = 16...160				
	24H = 25...250				
	26H = 40...400				
	28H* = 63...630				
UTR-0 UTR-3 UTR-5	26H = 40...400		I4 = G 1/2 N4 = 1/2" NPT YY = other		00 = none 1B = 1x N/O, PNP 2B = 2x N/O, PNP
	28H = 63...630				
	30H = 100...1000				
	32H = 160...1600				
	33H* = 200...2000				

*Only with SS float (UTR/UVR-3 and -5)

**The switch works only with steel float (UTR/UVR-3 and-5)


Order Details Gases (Example: UVR-3 26L 1 I3 00)

Model	Measuring range Air (Nm ³ /h 1,013bar; 20°C)	Needle valve	Connection	Switch**	
UVR-0 UVR-3 UVR-5	20L = 0,1...1	0 = without 1 = with	I3 = G 3/8 N3 = 3/8" NPT YY = other	00 = none 1B = 1 x PNP 2B = 2 x PNP	
	22L = 0,16...1,6				
	24L = 0,25...2,5				
	26L = 0,4...4				
	28L = 0,63...6,3				
	30L = 1...10				
	32L = 1,6...16				
33L = 2...20					
UTR-0 UTR-3 UTR-5	26L = 0,4...4		I4 = G 1/2 N4 = 1/2" NPT YY = other		00 = none 1B = 1 x PNP 2B = 2 x PNP
	28L = 0,63...6,3				
	30L = 1...10				
	32L = 1,6...16				
	34L = 2,5...25				
	37L* = 5...50				

*Only with SS float (UTR/UVR-3 and -5)

**The switch works only with steel float (UTR/UVR-3 and-5)

12. Dimensions

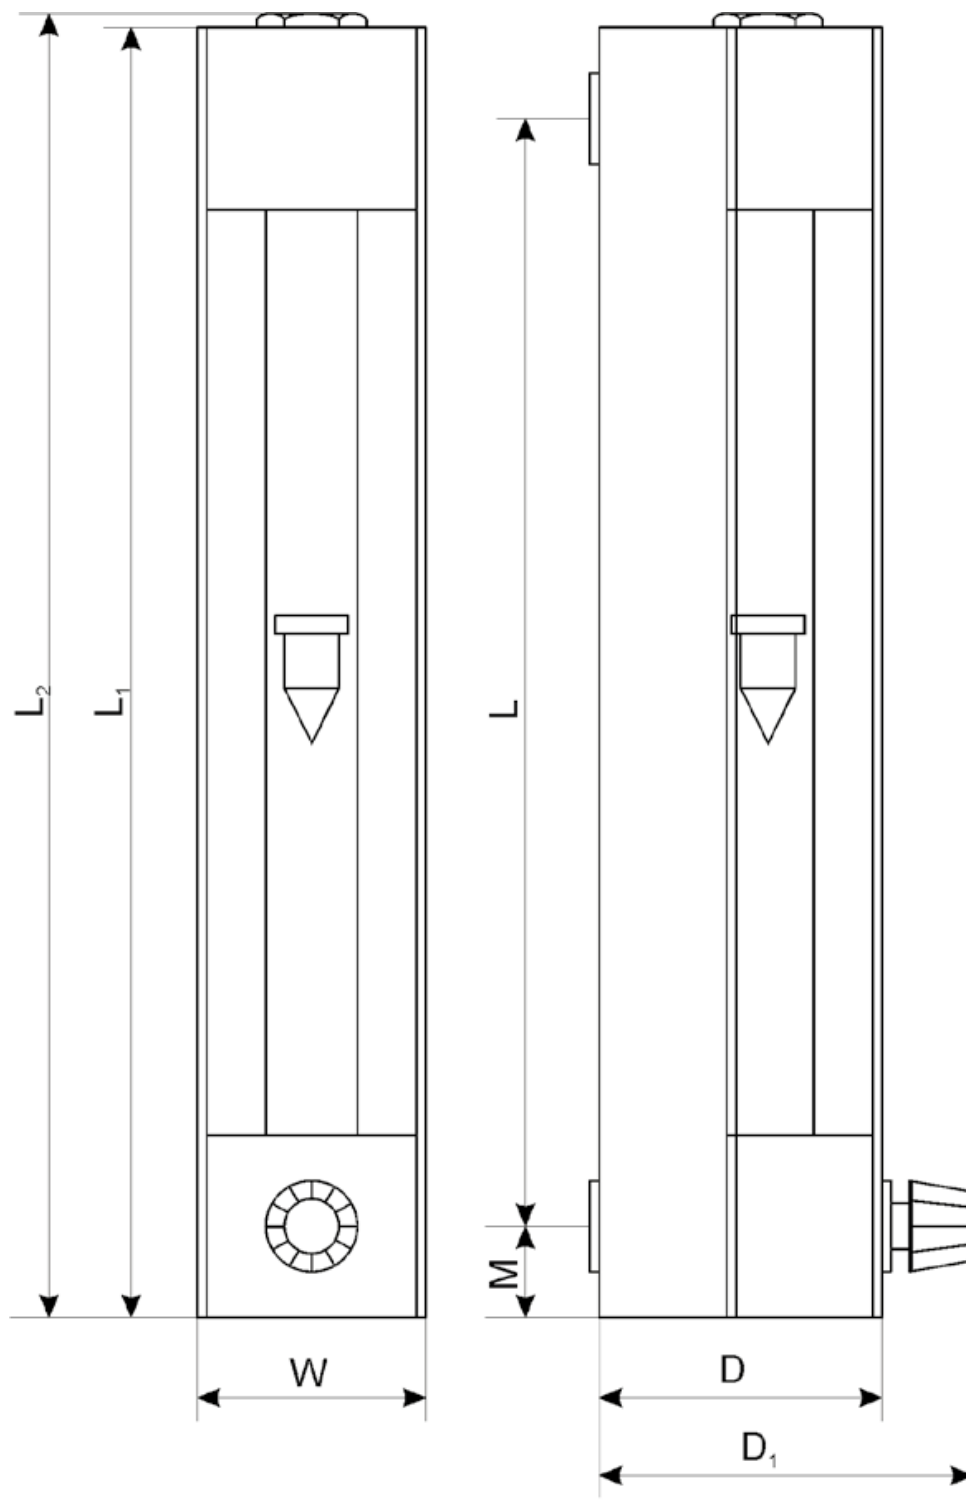

Model	L	L ₁	L ₂	M	W	D	D ₁
UVR	240	283	287.5	21	50	62	100 - 108
UTR	340	375	375.0	17	62	62	105 - 114

13. EU Declaration of Conformance

We, KOBOLD Unirota Kft. Nyíregyháza Hungary, declare under our sole responsibility that the product:

Variable area flow meter **Model: UVR/UTR...**

to which this declaration relates is in conformity with the standards noted below:

EN IEC 63000:2018 Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Also, the following EC guidelines are fulfilled:

2011/65/EU **RoHS** (category 9)
2015/863/EU Delegated Directive (RoHS III)

Nyíregyháza, 10 May 2022



Dénes Szabó
General Manager

14. EU Declaration of Conformance (contact)

EU-Konformitätserklärung Nr.: 5020-2M
 EU Declaration of Conformity No.:

TURCK

Wir/ We: HANS TURCK GMBH & CO KG
 WITZLEBENSTR. 7, 45472 MÜLHEIM A.D. RUHR

erklären in alleiniger Verantwortung, dass die Produkte
 declare under our sole responsibility that the products

Induktive, kapazitive, magnetische
 und Ultraschall- Näherungsschalter:
 Inductive, capacitive, magnetic
 and ultrasonic proximity
 switches:

Der Typen beginnend mit:
 types starting with:
 BI, NI, S32SR, SI, WI, BR, MP, DBI, DNI, DTBI, DTNI, BC, NC, RU, WIM,
 BIM

auf die sich die Erklärung bezieht, den Anforderungen der folgenden EU-Richtlinien durch Einhaltung der
 folgenden Normen genügen:
 to which this declaration relates are in conformity with the requirements of the following EU-directives by compliance with the following
 standards:

EMV - Richtlinie /EMC Directive EN 60947-5-2:2007/A1:2012	2014 / 30 / EU	26.02.2014
RoHS – Richtlinie /RoHS Directive EN 50581:2012	2011 / 65 / EU	08.06.2011
Niederspannungsrichtlinie /Low Voltage Directive EN 60947-5-2:2007/A1:2012 (für die Geräte mit Versorgungsspannung / for equipment with supply voltage: >50V AC bzw. >75V DC)	2014 / 35 / EU	26.02.2014

Weitere Normen, Bemerkungen:
 additional standards, remarks:

Zusätzliche Informationen:
 Supplementary information:

Mülheim a. d. Ruhr, den 29.01.2019

Ort und Datum der Ausstellung /
 Place and date of issue



i.V. Dr. M. Linde, Leiter Zulassungen /Manager Approvals
 Name, Funktion und Unterschrift des Befugten /
 Name, function and signature of authorized person